



Promessa™ Series Corner Baskets

Revised: 9/8/17

Installation Procedures (Gypsum Wallboard/Drywall Surfaces)

Model G100-003 Shallow Corner Basket

G100-003-PC



G100-003-BN




G100-003-ORB




Model G100-004 Deep Corner Basket

G100-004-PC

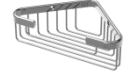


G100-004-BN

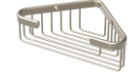

G100-004-ORB



STEP 1 Understand Marking Template

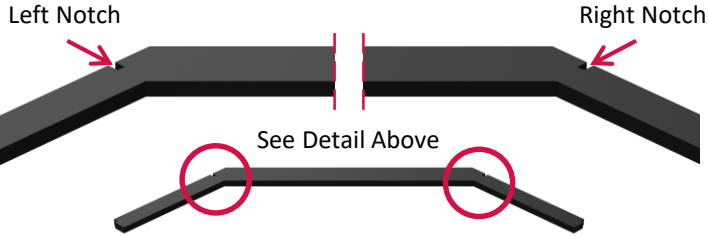

- Each basket kit comes with (1) Marking Template. The Marking Template has notches to assist with all GWB (Gypsum Wallboard) corner basket installations and ensures that each basket mounts properly.
- Use the inside notches (Left & Right) to assist when installing either Shallow Corner Basket or Deep Corner Basket.

Technical Fact:

Marking Template acts as a precise measurement tool


Not using Marking Template will result in basket mounting failure

STEP 2 Insert Blocking

- Insert no less than 2"x 4" wood blocking.


Warning: FASTENER SYSTEM ONLY WORKS WITH WOOD BLOCKING

(DO NOT USE WALL ANCHORS WITH THIS SYSTEM)

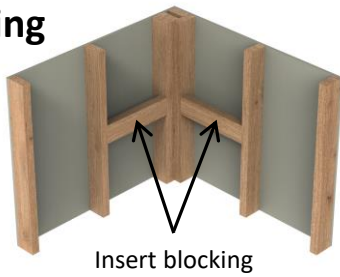


Insert blocking

STEP 3 Locate Wood Blocking

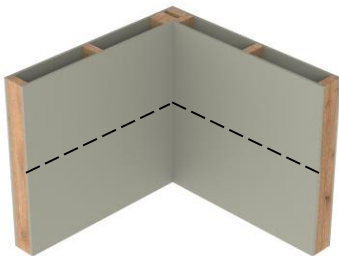


STEP 4 Using Marking Template

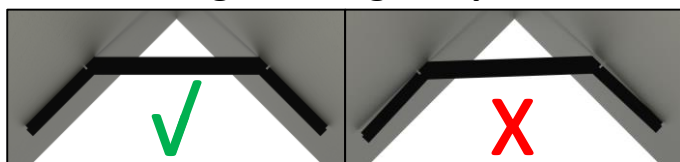


- Situate Marking Template so both ends are flush with corner walls (see above).

STEP 5 Create Level Lines

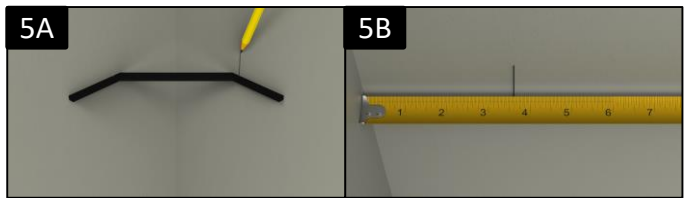


- As illustrated in 5A - Draw a vertical pencil line in the middle of both the right & left notch space.
- As illustrated in 5B - The center of both right and left vertical pencil lines should measure precisely 3-5/8" from the corner of the wall.

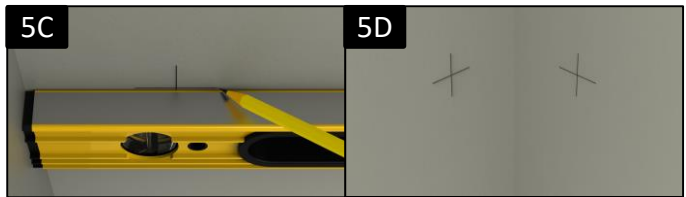

- As illustrated in 5C - Draw a horizontal pencil line on right and left wall and level this line as shown.
- As illustrated in 5D - Intersecting lines should be level. Both right and left vertical lines should measure precisely 3-5/8" from the corner of the wall.

STEP 6 Drill 3/8" Holes

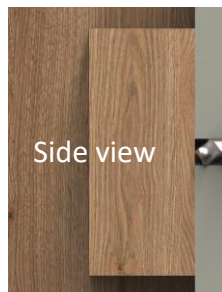

Side view

Warning: Do not drill deeper than the thickness of gypsum wallboard (drywall) material.

- Drill a 3/8" hole (right and left sides) in gypsum wallboard (drywall) to accommodate spacers in STEP 7. Place some tape on the drill to mark drill depth. (Example: If wallboard material is 1/2" thickness, only drill that depth. Do not drill into wood blocking). See 'Side view' diagram above.



TILEWARE
PRODUCTS



**FASTENER SYSTEM ONLY WORKS WITH WOOD BLOCKING
(DO NOT USE WALL ANCHORS WITH THIS SYSTEM)**


For 1/2"
Materials Only

Promessa™ Series Single Wall Baskets

Revised: 9/8/17


Installation Procedures (Gypsum Wallboard/Drywall Surfaces)

STEP 7 Insert Spacers

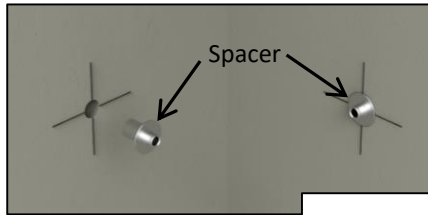

• Insert both left and right spacers into drilled holes. Press in firmly so that flange mounts flush with gypsum wallboard (drywall) material.

• After inserting spacers, use a tape measure (as illustrated) to ensure center of each spacer is 3-5/8" to corner of wall.

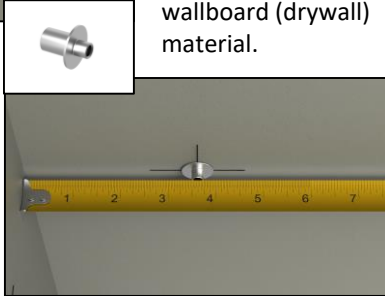

Technical Fact:


Spacer prevents gypsum wallboard (drywall) from collapsing at drilled hole. Additionally, protects from over-tightening screw which can draw the accessory into the gypsum wallboard (drywall) material.

STEP 8 Install Ferrules




• Simply slip ferrules over spacers.

STEP 9 Mount Basket With Screws

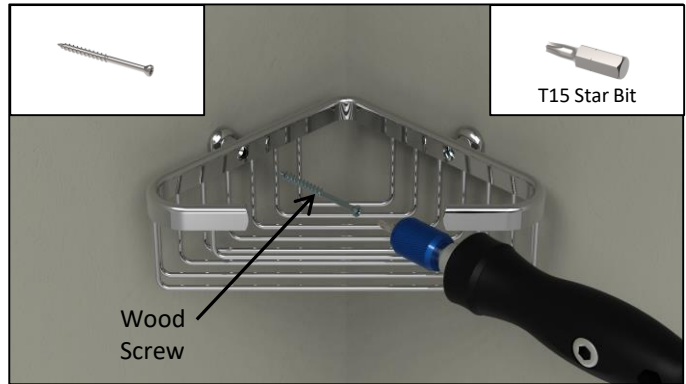

• Mount basket with stainless steel wood screws, both left and right sides, with provided star drive bit in kit (or any T15 star drive bit) using a multi-bit screwdriver or power drill.

STEP 10 Install Decorative Plugs

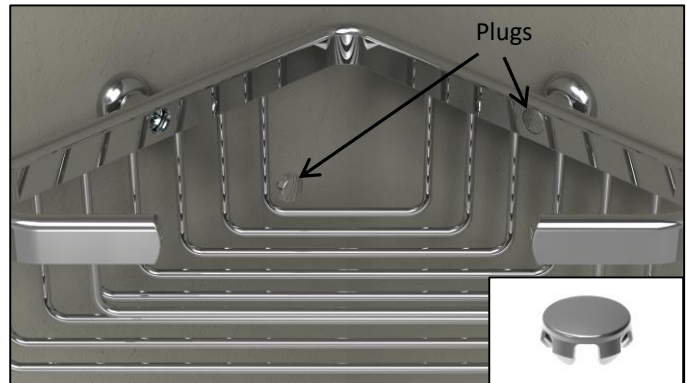

• Install decorative plugs. Easier if all prongs enter hole then press firmly. Installation complete.

TileWare Products

PO Box 793, Hickory, NC 28603
Technical Support: 828-322-9273
Email: info@tilewareproducts.com
www.tilewareproducts.com

*Thank you for
using our
products!*

Shallow Corner & Deep Corner Basket Parts List

Shallow Corner Basket Quantity 1 per kit	Deep Corner Basket Quantity 1 per kit	Spacer quantity 2 per kit	Standard Ferrule quantity 2 per kit	Decorative Plug quantity 2 per kit	Wood Screw quantity 2 per kit	Star Drive Bit-T15 quantity 1 per kit
255289	255292	C200-044	255245	243168	C200-048	C200-049